

## INSTRUCTIONS FOR USE

For Concrete, Brick, Lamp columns,  
Certain metals (Steel. Galv.  
Aluminium)

1. Ensure all areas are prepared properly- this means clean and free from contaminants.
2. Dry the area thoroughly.
3. First, use the Non-Darkening Primer to apply one coat to all porous surfaces. This is only necessary for brick and concrete. (Allow to dry for approximately 2 hours).
4. You can use a brush, roller or spray gun to apply 1-2 coats of the Off the Wall Graffiti Protector (Clear or Coloured).
5. Ensure this is left to dry fully. (8 hours or overnight)


IF THE AREA GETS SCRATCHED THE OFF THE WALL  
GRAFFITI PROTECTOR WILL STILL WORK

# Off The Wall Graffiti Protector

**andrews**  
COATINGS LTD



APPLYING THE NON-DARKENING PRIMER ONTO THE POUROUS SURFACE.

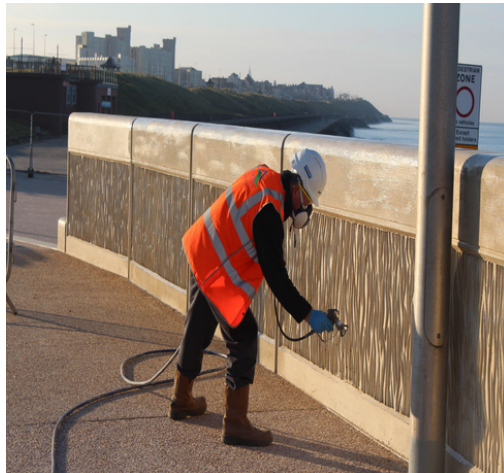

SPRAYING ANTI GRAFFITI PROTECTOR ONTO POROUS CONCRETE AFTER PRIMING.  
YOU CAN USE BRUSH, ROLLER OR SPRAY THE PRODUCT.



STEEL RAILWAY BRIDGE AFTER APPLICATION OF GREEN NU-GUARD AG THE BRIDGE HAS HAD GRAFFITI SPRAY APPLIED.

ANTI GRAFFITI PROTECTOR APPLIED BY BRUSH AND ROLLER DIRECTLY OVER THE OLD PAINT SYSTEM.



STEEL BRIDGE AFTER REMOVING THE GRAFFITI WITH WATER.



CONCRETE WALLS COATED IN OFF THE WALL ANTI GRAFFITI PROTECTOR. NO PRIMER JUST CLEANED DRIED THEN ONE COAT OF OFF THE WALL GRAFFITI PROTECTOR.

THIS WAS COMPLETED 5 YEARS AGO AND THE PICTURE WAS TAKE JUNE 2017 ALL WORKING WELL.

Andrews Coatings Ltd  
info@andrewscoatings.co.uk  
01902 710057